




**Ducati Multistrada 1260**  
**Engine Guard**


**Installation Instructions**





## Kit Contents PRN013979


- A** 1 x Exhaust Bracket
- B** 1 x Header Bracket
- C** 1 x Inner Grill
- D** 2 x Cable Ties
- E** 2 x Grommets
- F** 2 x Top Hat Spacer
- G** 3 x M6 Black Washer
- H** 4 x M4 Flange Nuts
- I** 5 x M6 x 12mm Black Button Head Bolts

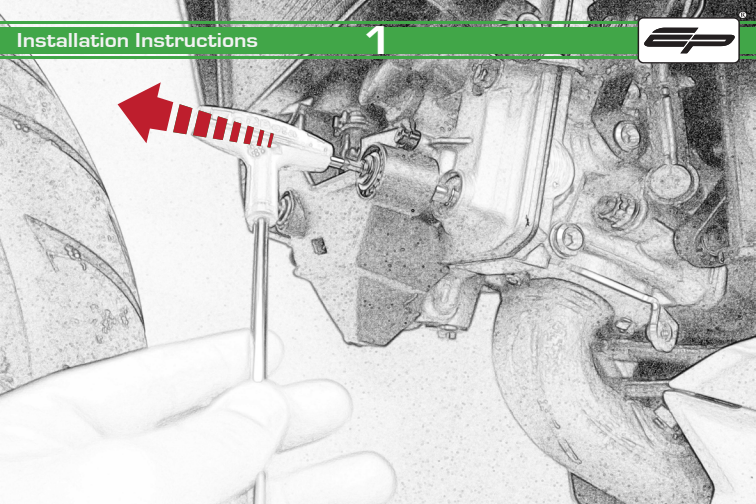

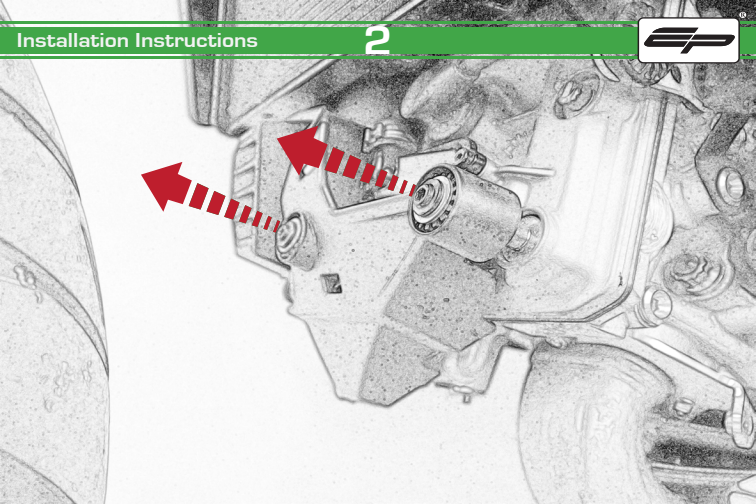



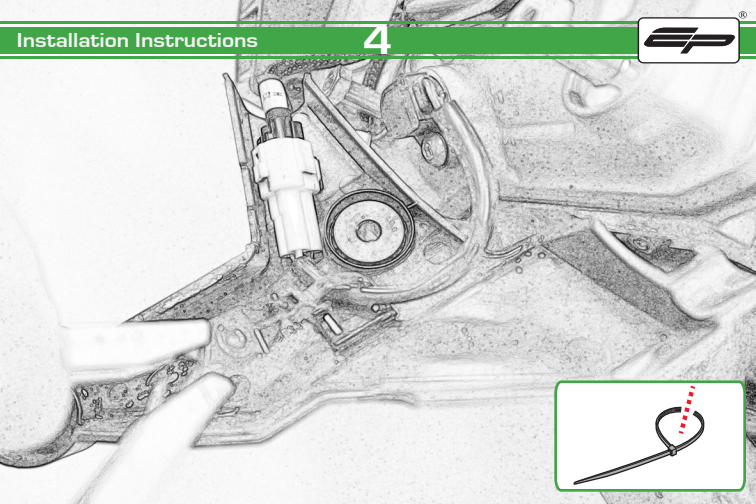

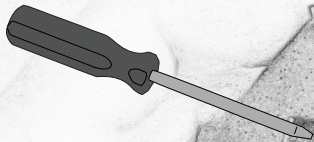



Caution


**Remove Clip Using  
A Screwdriver**






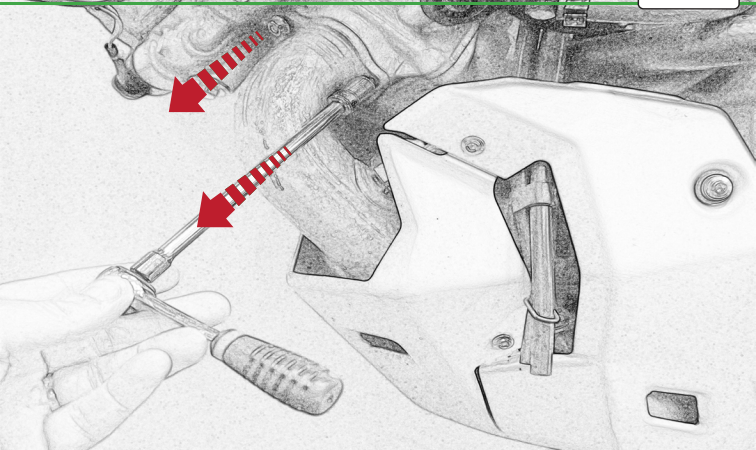



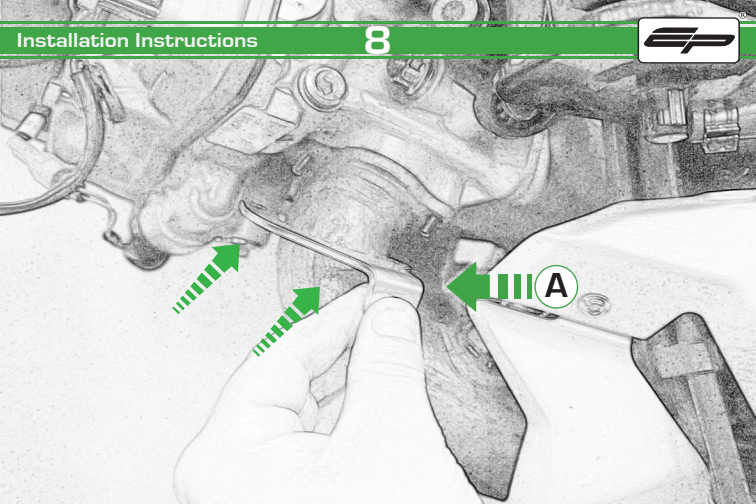



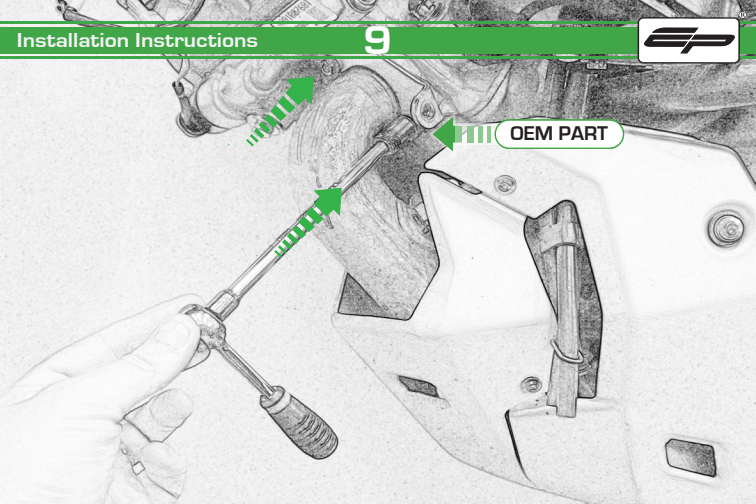



OEM PART

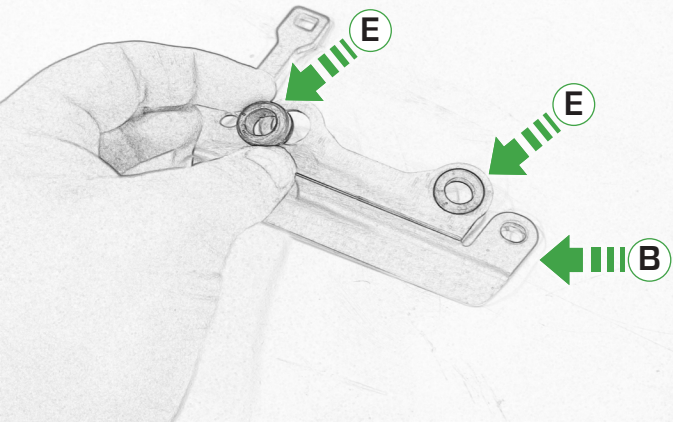

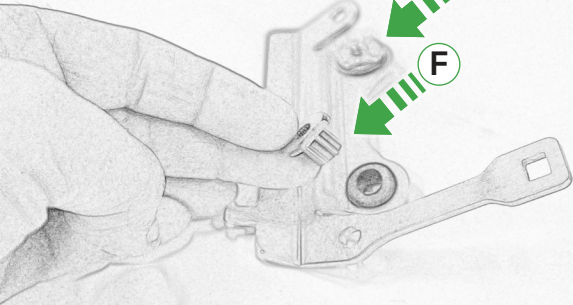


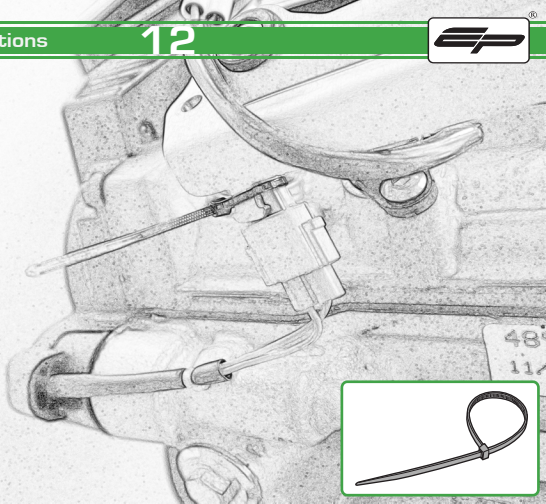


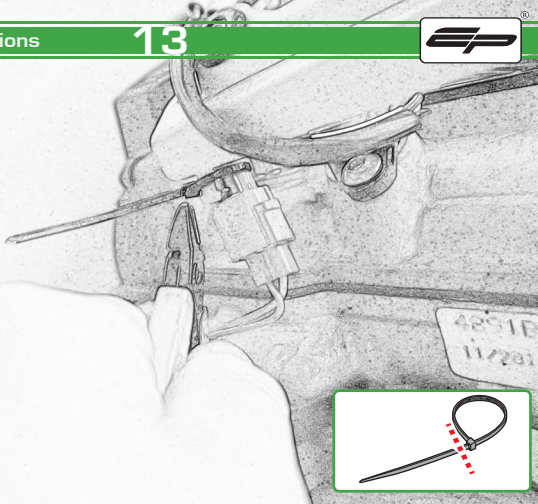

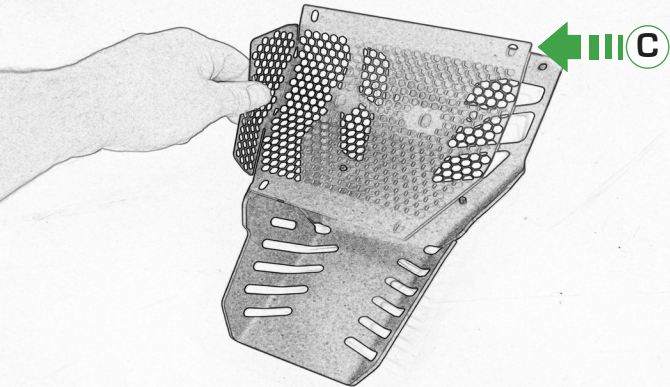





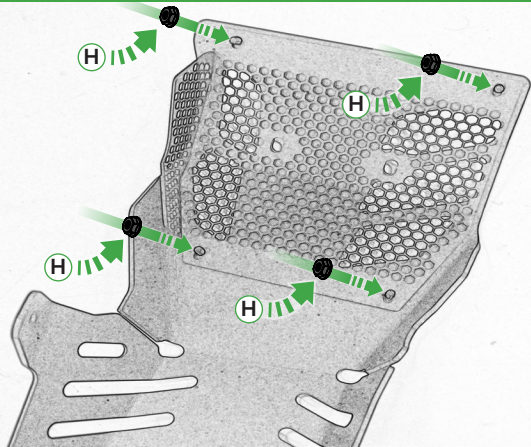


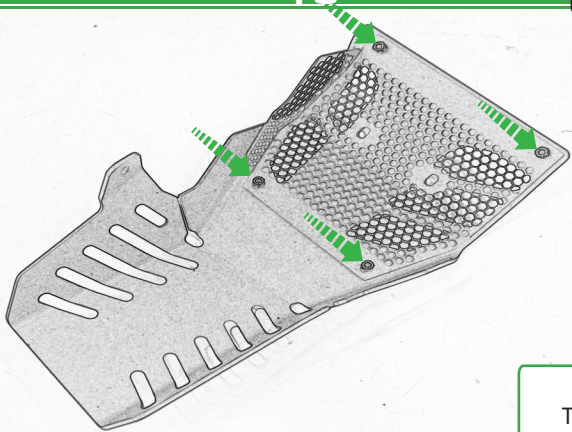


Fully  
Tighten

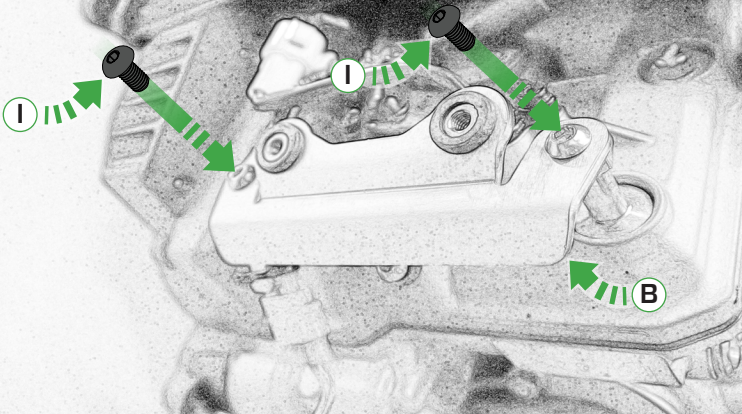


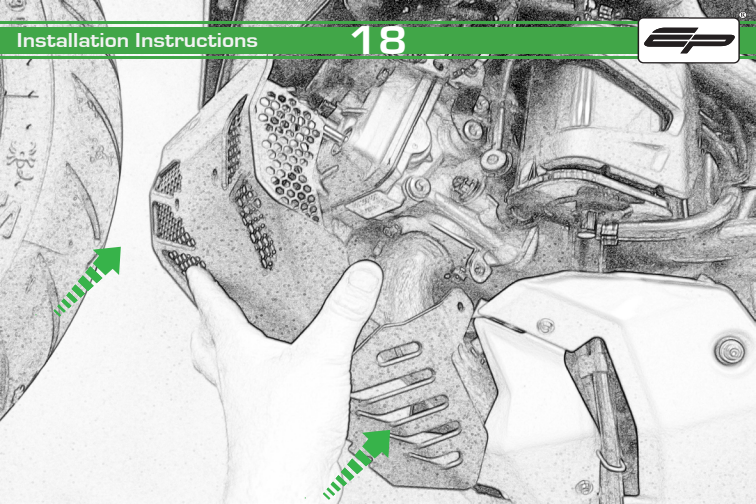


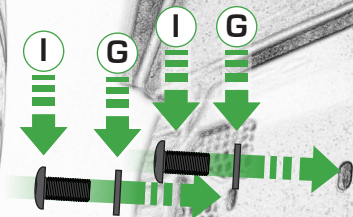

Do Not Fully Tighten

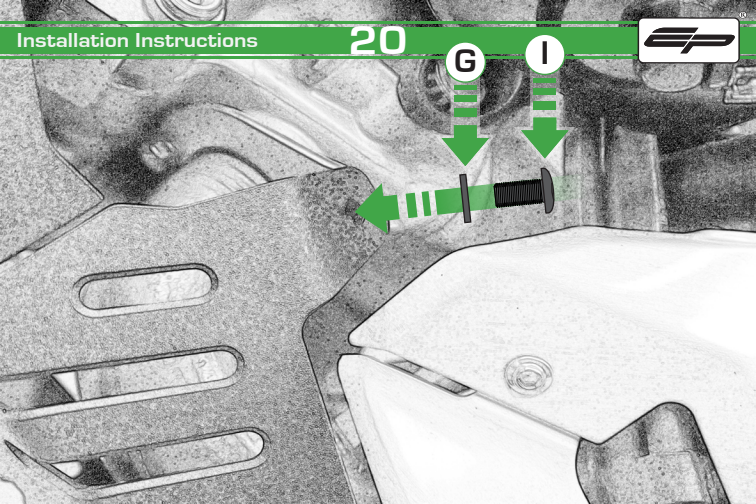


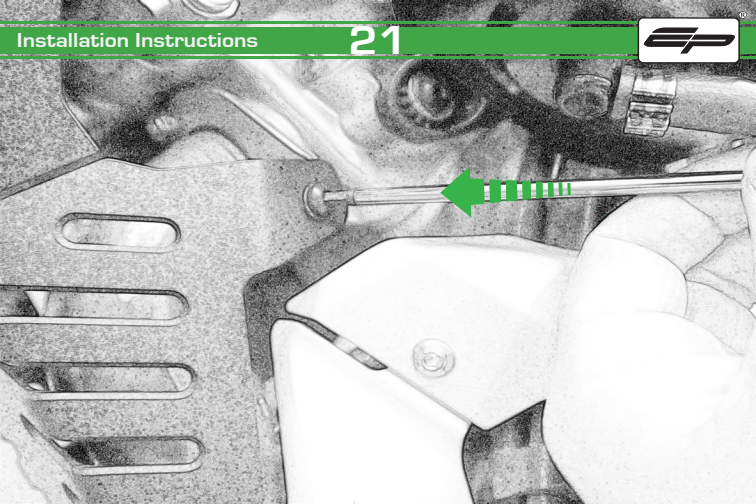

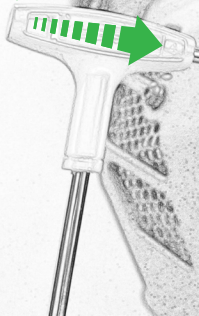

Adjust Guard  
And Fully Tighten





Adjust Guard  
And Fully Tighten



### ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)