

Ducati Hypermotard 950 Tail Tidy



Kit Contents PRN014405


- A 1 x Reflector Kit
- B 1 x P-clip 6.5mm (3)
- © 1 x P-clip 8mm (4)
- D 2 x Nylon Spacer
- E 2 x Threaded Bars
- ① 2 x M4 Special Washers
- © 2 x M4 x 12 Black Button Head Bolts
- ① 2 x M5 x 10 Countersunk Screws
- ① 2 x M4 x 6 Black Button Head Bolts
- ① 3 x M8 x 12 Silver Button Head Bolts
- (K) 4 x M4 x 10 Silver Button Head Bolts
- I 4 x M5 x 8 Silver Button Head Bolts

M 4 x Support Arm Washers
N 8 x M4 x 8 Black Button Head Bolts





0



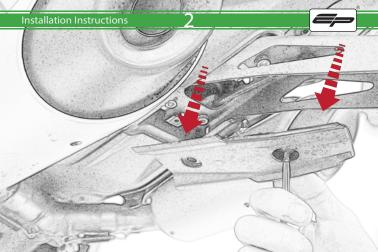





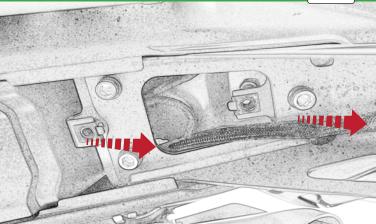


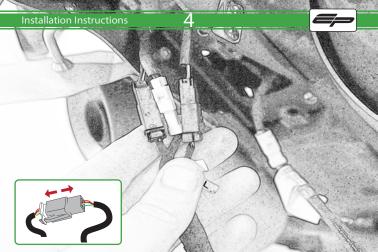



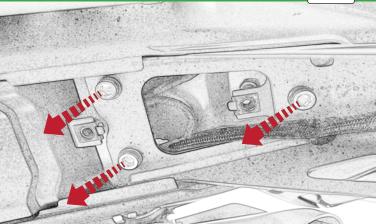


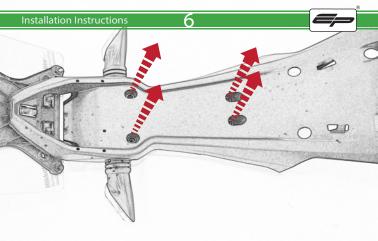

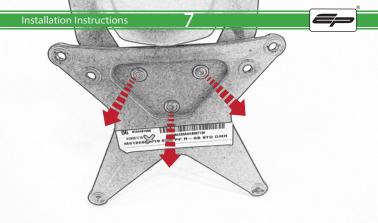







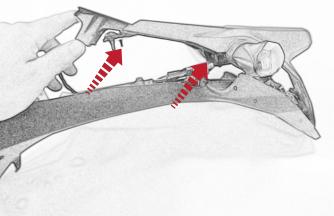










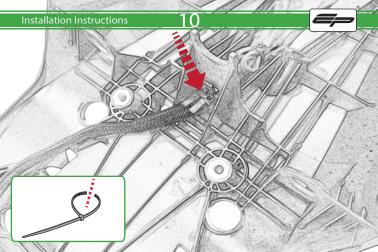


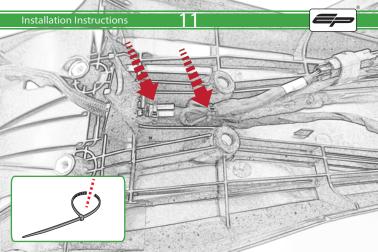



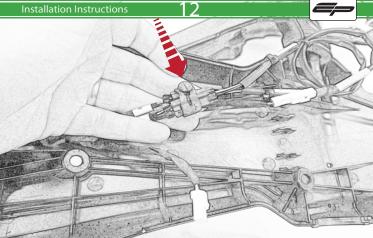


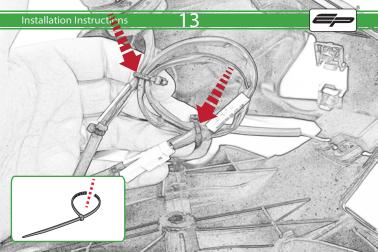


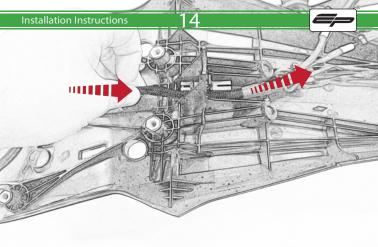






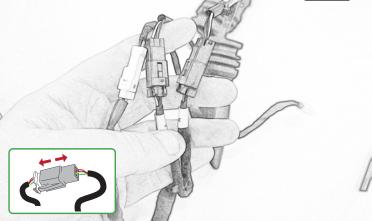

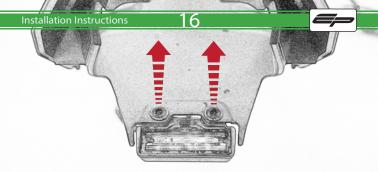






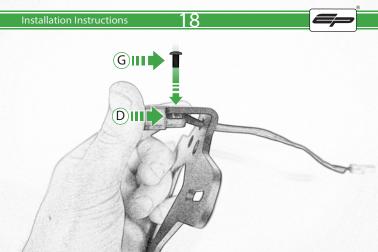







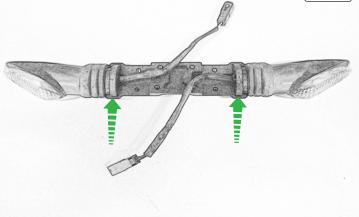




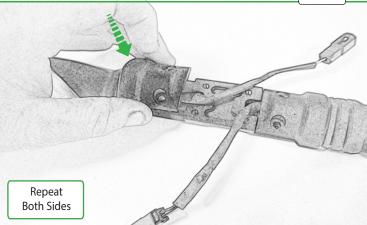


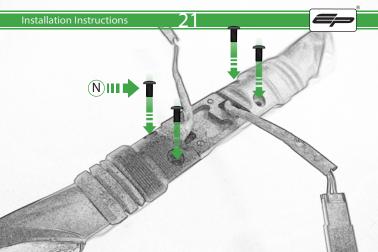





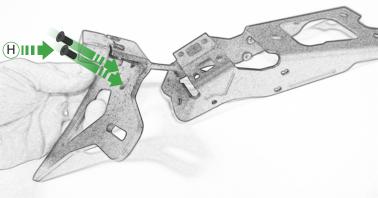


22

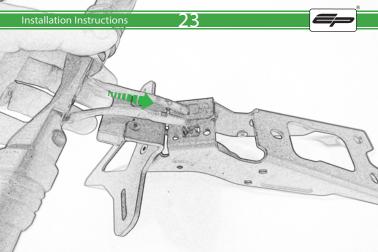

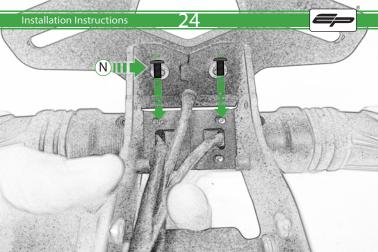

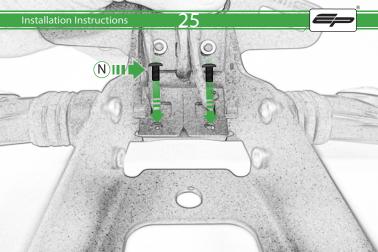


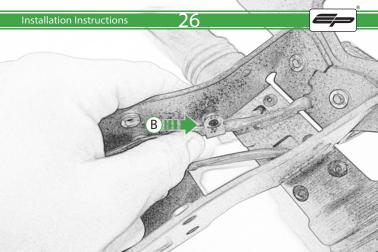


27


L




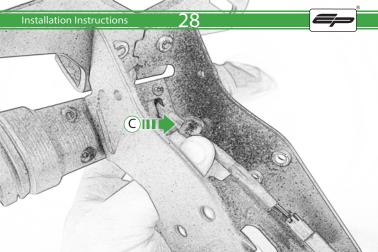

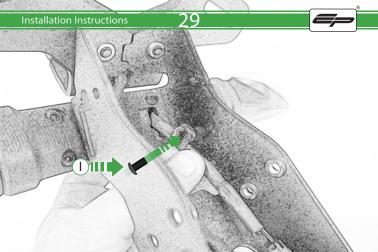




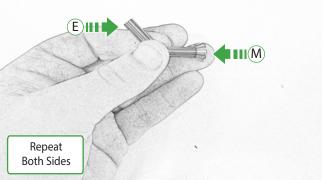

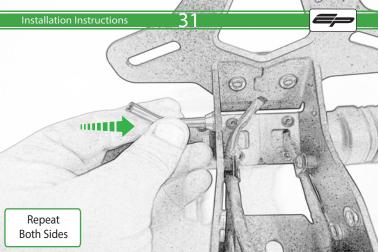



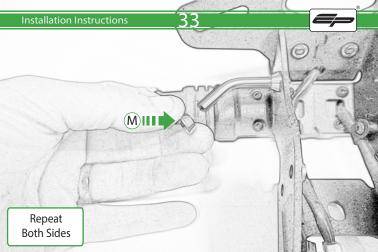







11111

1117




Repeat Both Sides

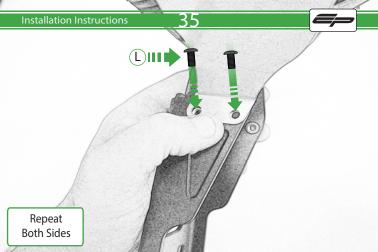

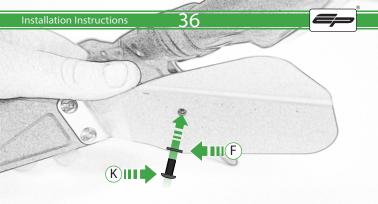




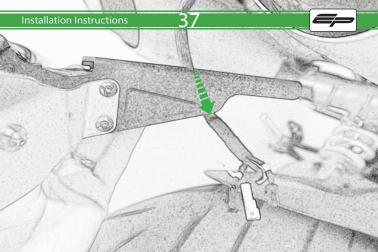









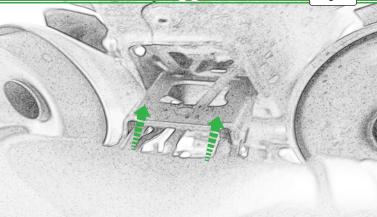

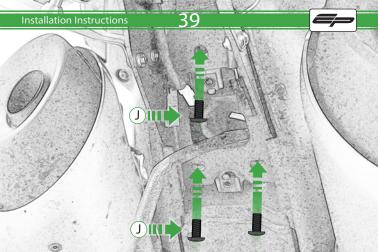

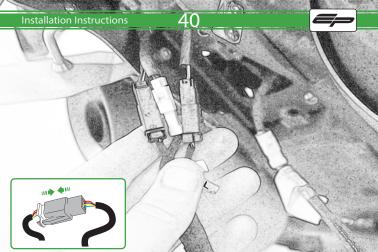

Installation Instructions

0

Caution

Distance of the local distance of the local


C



Locate loom in underseat area ensuring they do not get trapped or squashed

and the second second second


60

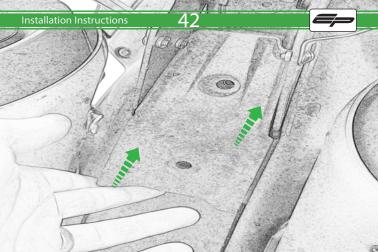



Installation Instructions




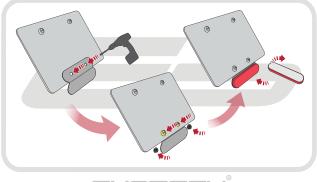



Installation Instructions



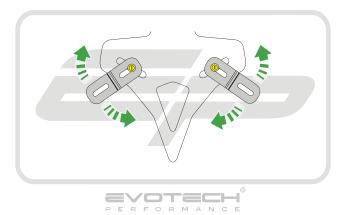



After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed. Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle. It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.





www.evotech-performance.com